


Instructions for wiring the Remote Mounted Logix 3200IQ/MD to the Low Profile Position Sensor Module.


1. Remove the outer Main Housing Covers of both the Logix 3200IQ/MD and the Low Profile Position Sensor Module.

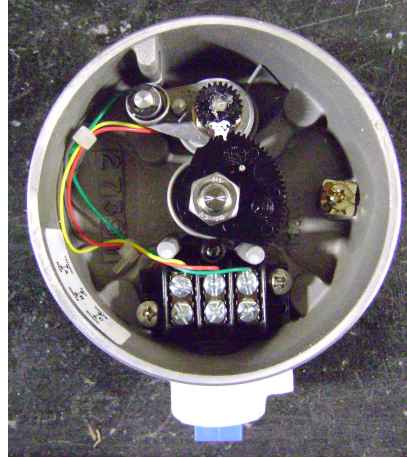

2. Remove the grey Main Board Cover on the Logix 3200IQ/MD.



3. Attach wires from the Low Profile Position Sensor Module's terminal strip to the 3200IQ/MD terminal strip; 22 or 24 AWG wire is recommended. Be sure to run the wires through the threaded conduits and to connect terminal A to terminal A, B to B, and C to C.

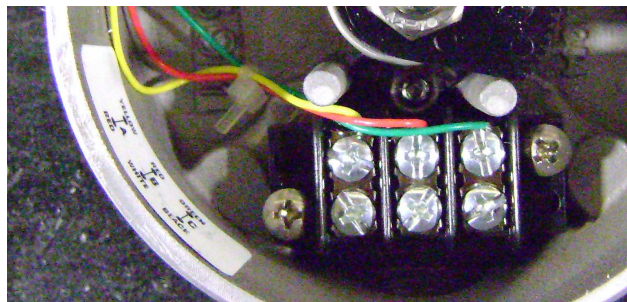

4. Replace all covers and seal all the conduits.